
EWPE SMART Wi-Fi Control Application

Wi-Fi app and set up

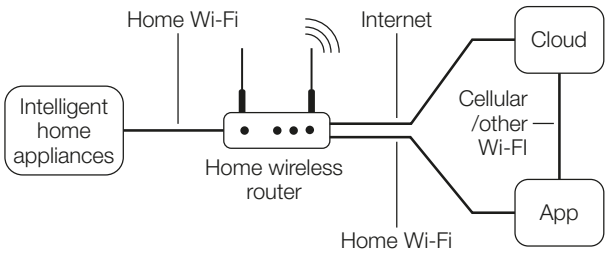

Operating systems

Requirement for user's smart phone:

iOS system

Support iOS7.0 and above version

Android system

Support Android 4.4 and above version

Download and installation

Scan the QR code or search **Ewpe Smart** in the application market to download and install it. When the application is installed, register the account and add the device to achieve long-distance control and LAN control of smart home appliances.

For more information, please refer to **Help** in app.

Set up process

1. Scan the QR code above with your smart phone to download and install the Wi-Fi application directly.
2. Open the Wi-Fi app and click **Sign up** for registration.
3. Sign in through the prompt interface, you can also enter the homepage and click the profile picture at the left upper corner to sign in.
4. Click **+** at the right upper corner of homepage to add device and select **AC**.
5. After selecting **AC**, you can select different reset tools according to actual situation. The app interface will provide relevant operation instructions for different tools.
6. Reset the air conditioner (refer to the operation instructions in app interface) and click **Next** to add home appliance automatically (Wi-Fi password shall need to be inputed).
7. Or after setting and activating the air conditioner, click **Add appliance manually** at the right upper corner to select the wireless network for controlling the device. Then confirm family Wi-Fi and arrange configuration.
8. After finalising device reset and filling in the correct information, search device and arrange configuration.

Main function settings

In the homepage, click the device in device list and enter device operation interface.

Set mode, temperature and fan speed to your desired choice.

Advanced settings

Click **FUNC** in the lower left corner in device operation interface to enter advanced settings

Swing Settings

Click **Up down swing** or **Left right swing** to turn on or turn off swing function. Click the arrow at the right lower corner of icon to enter the set swing range.

Preset Setting

Select **Timer** to set preset times of your choice

Other function settings

Homepage menu

Click the profile picture at the left upper corner of homepage and set each function in the following menu.

Scene

Click **Scene** and then you can operate the devices in the preset scene.

Home management

Click **Home management** to create or manage family. You can also add family members according to the registered account.

Help


Click **Help** and view the operation instructions of the app.

See over the page for further explanation of set up and settings

Set Up Process

Install Ewpe Smart APP


Scan the QR code above with your smart phone to download and install the Wi-Fi application directly.

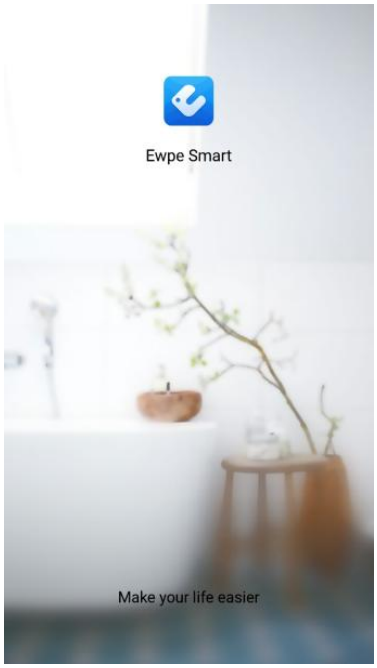

Registration


Open the Wi-Fi app and click Sign up for registration.



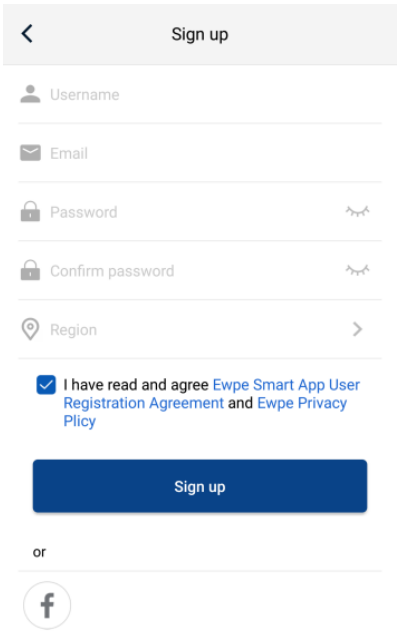


Sign In

Sign in through the prompt interface, you can also enter the homepage and click the profile picture at the left upper corner to sign in.

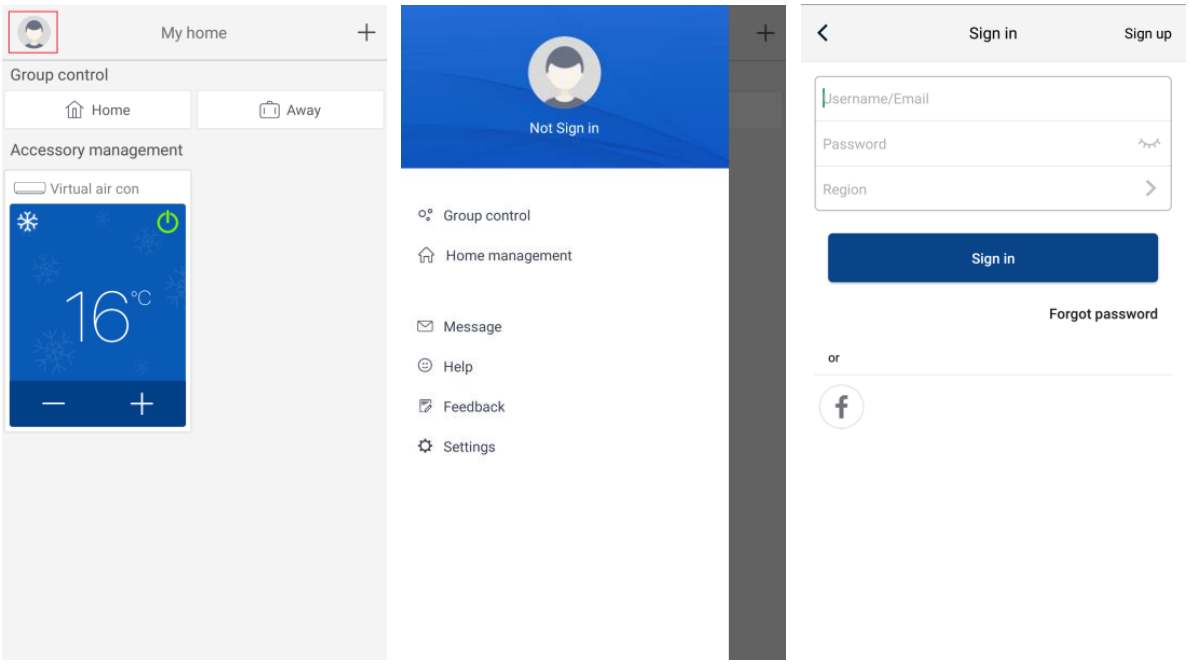

Add Device


Click + at the right upper corner of homepage to add device and select AC.

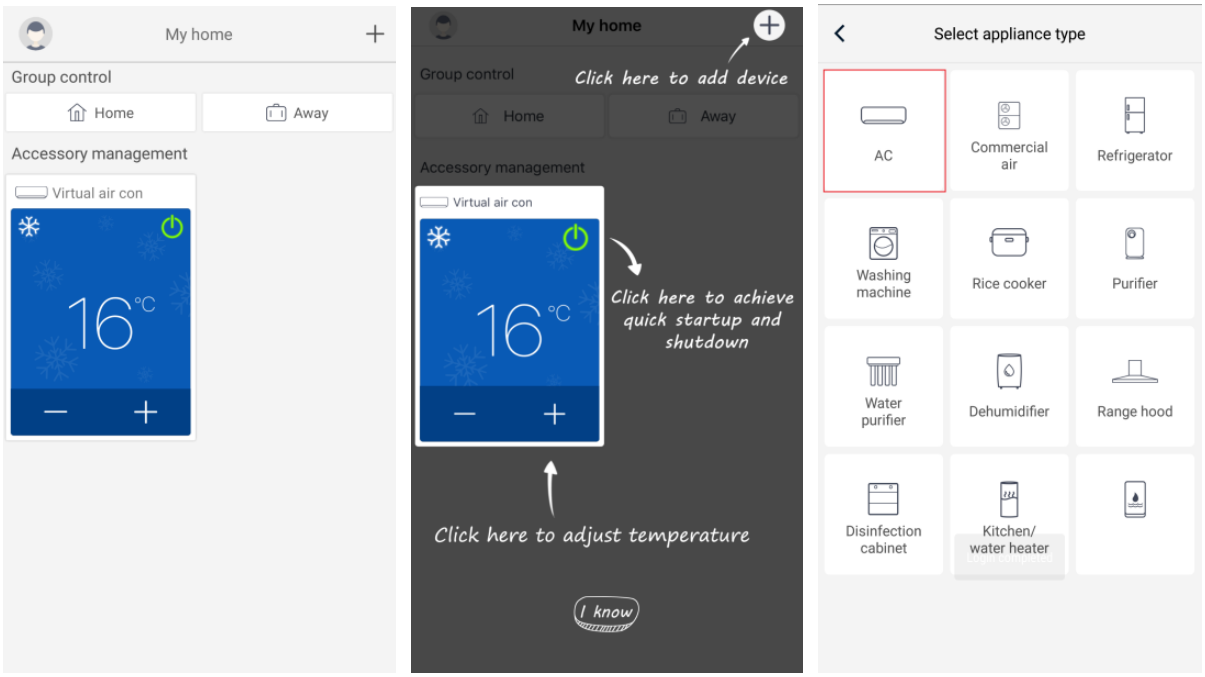



Select AC


After selecting AC, you can select different reset tools according to actual situation.

The app interface will provide relevant operation instructions for different tools.

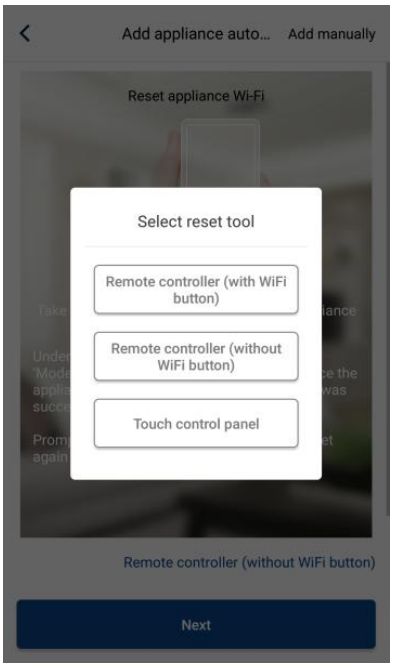

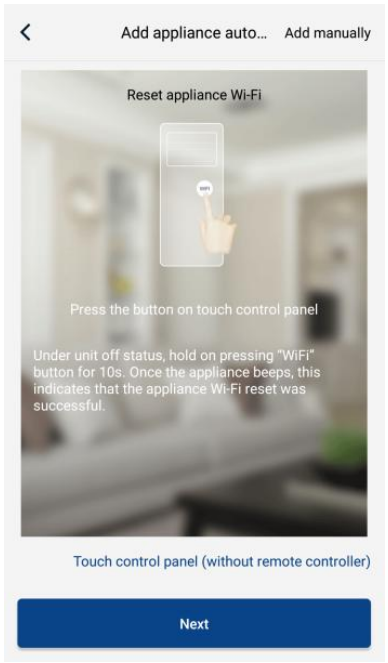


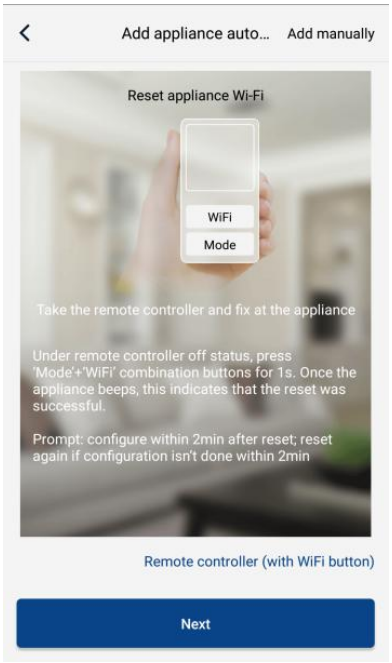


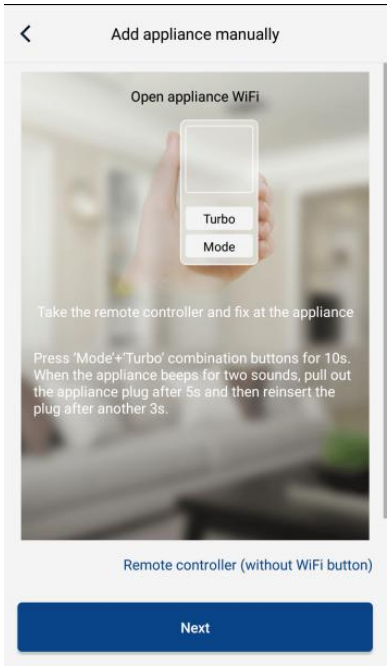

Reset AC


Reset the air conditioner (refer to the operation instructions in app interface) and click Next to add home appliance automatically (Wi-Fi password shall need to be inputed). Or after setting and activating the air conditioner, click Add appliance manually at the right upper corner to select thewireless network for controlling the device. Then confirm family Wi-Fi and arrange configuration.

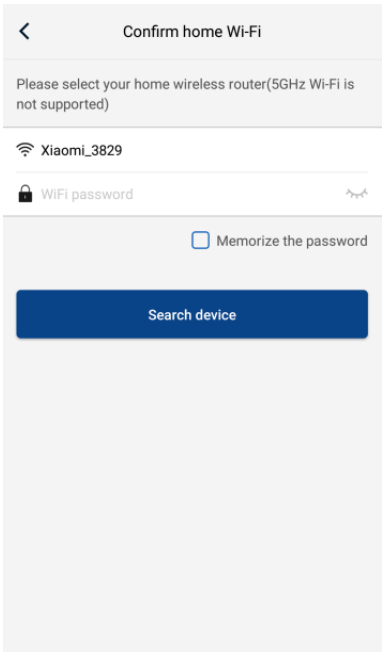


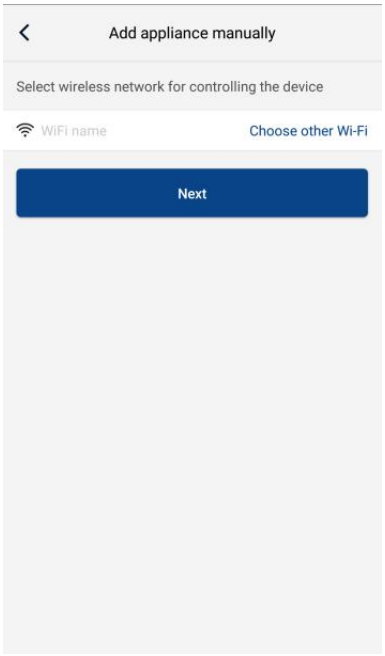


Finalise Set Up

After finalising device reset and filling in the correct information, search device and arrange configuration.

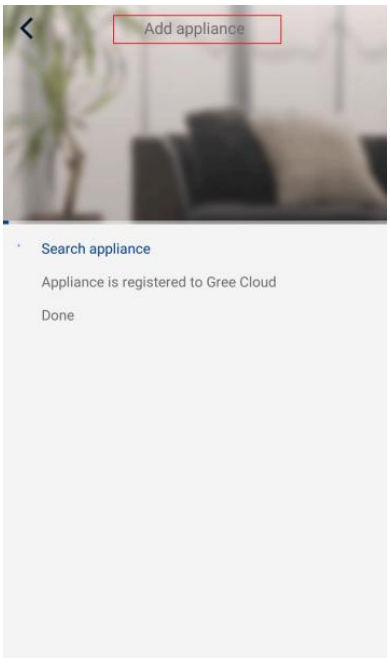

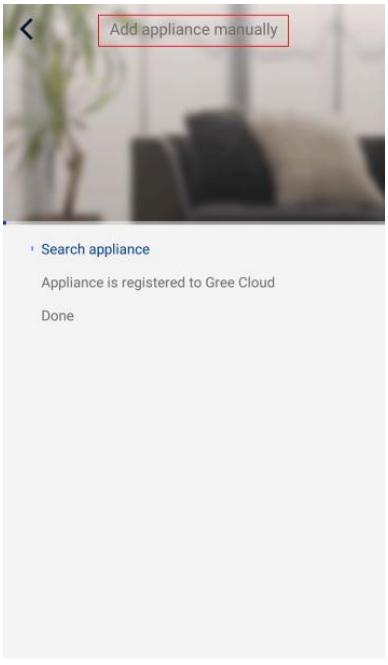

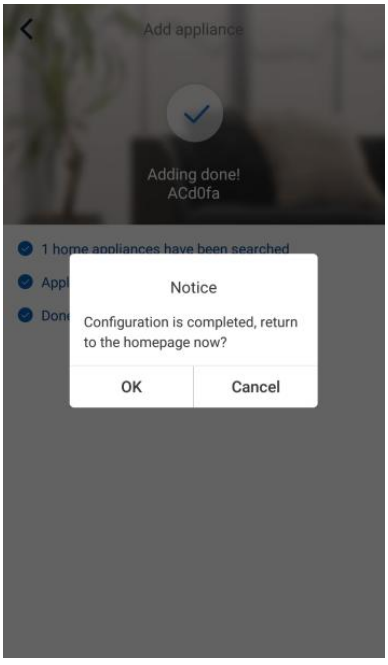


Settings

Main Function Settings


In the homepage, click the device in device list and enter device operation interface.

Set mode, temperature and fan speed to your desired choice.

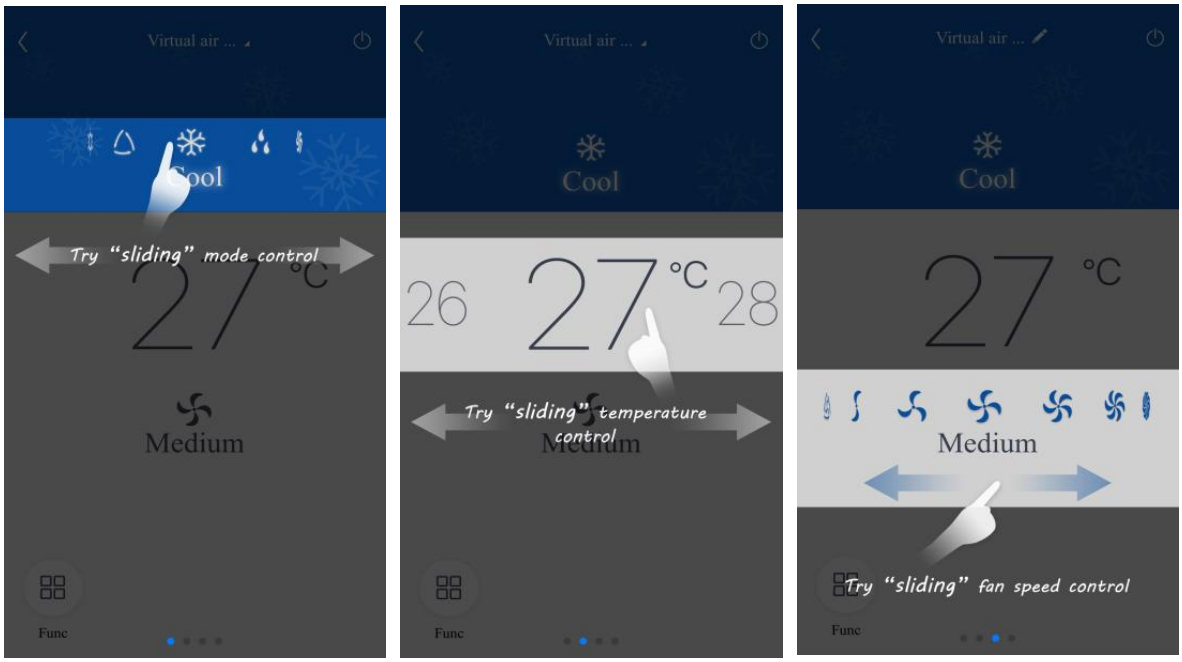


Advanced Function Settings


Click FUNC in the lower left corner in device operation interface to enter advanced settings

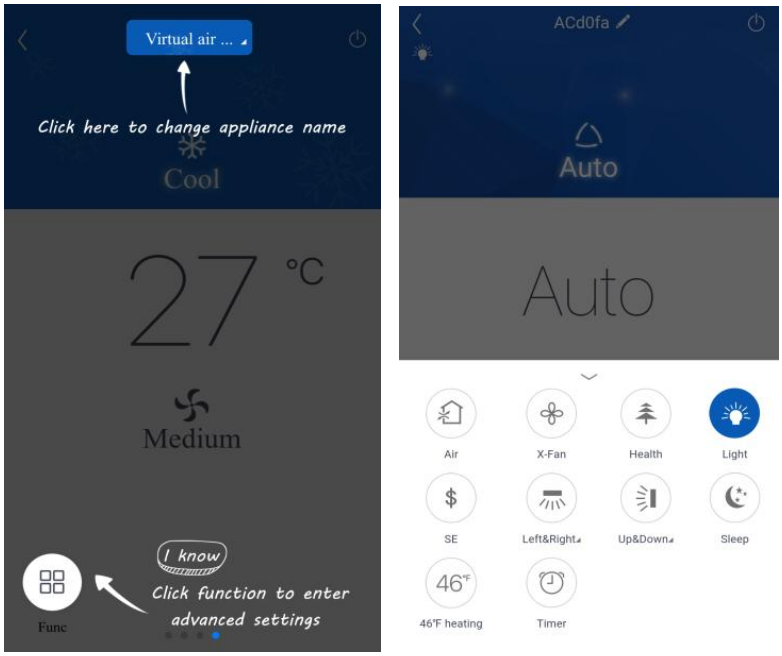

Preset Settings
Select Timer to set preset times of your choice

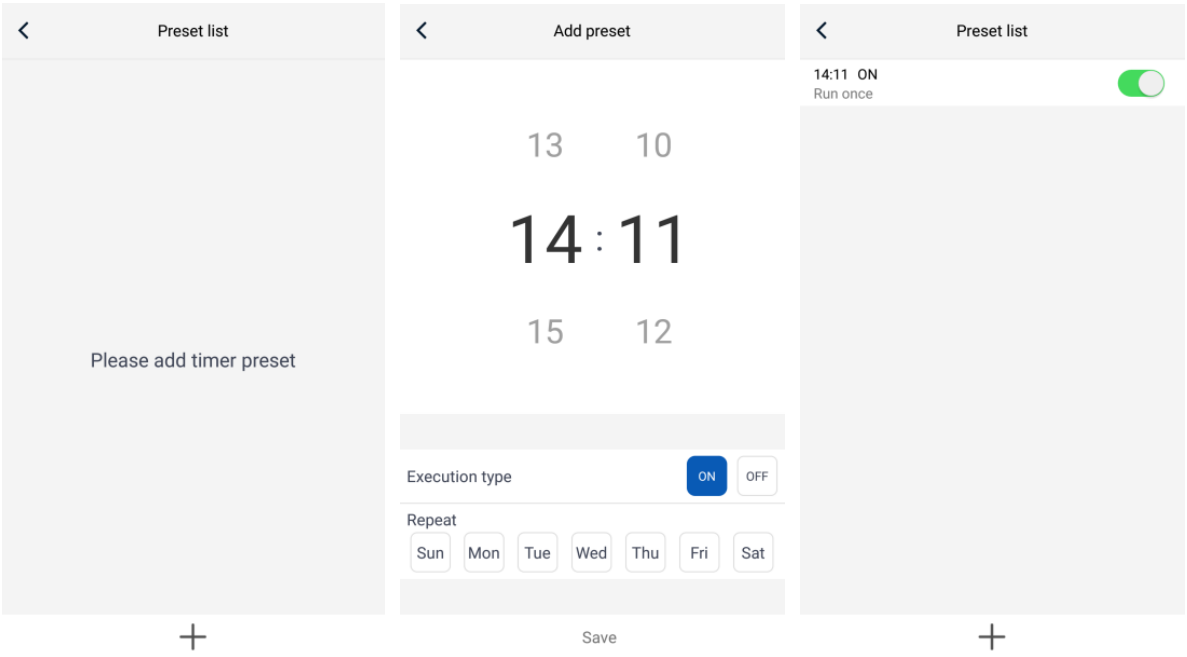



Swing Settings
Click Up down swing or Left right swing to turn on or turn off swing function.
Click the arrow at the right lower corner of icon to enter the set swing range.

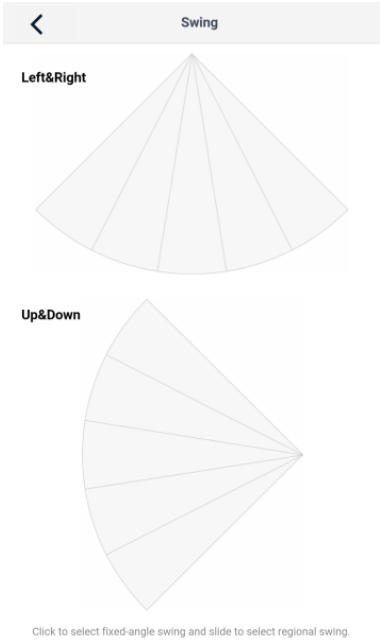

Homepage Menu

Click the profile picture at the left upper corner of homepage and set each function in the following menu.

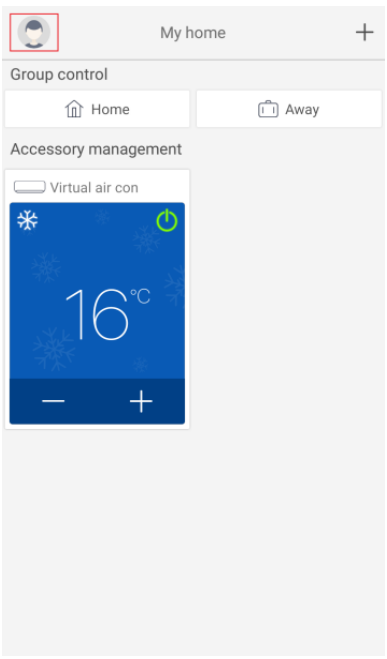

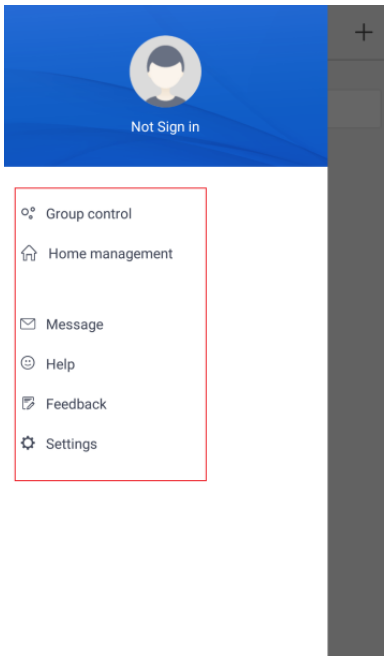


Scene

Click Scene and then you can operate the devices in the preset scene.






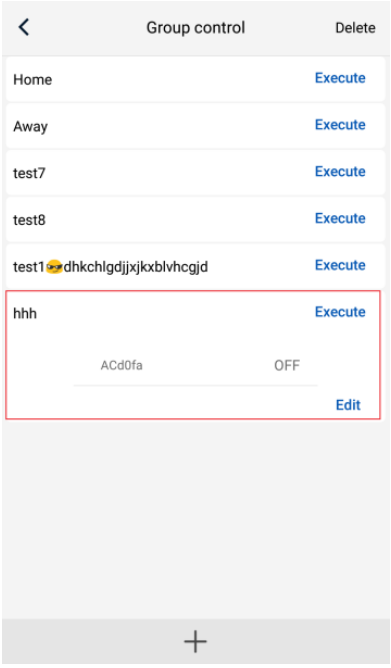



Home Management


Click Home management to create or manage family. You can also add family members according to the registered account.



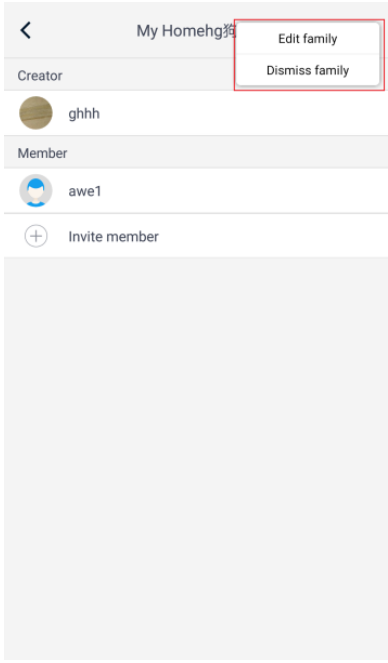

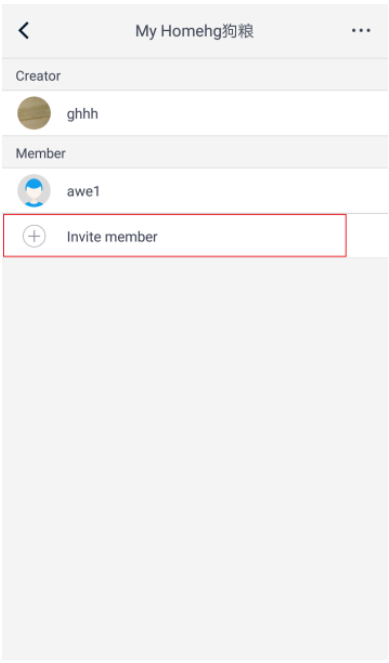


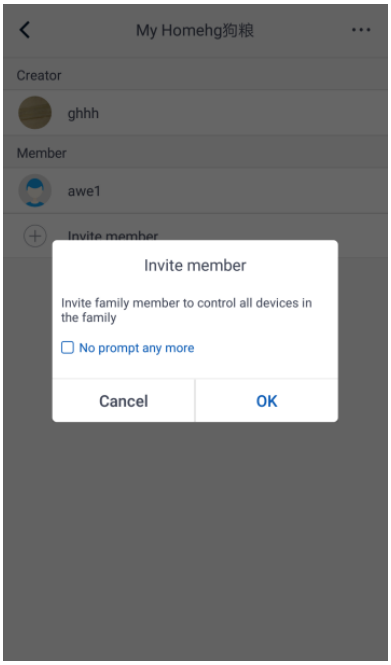


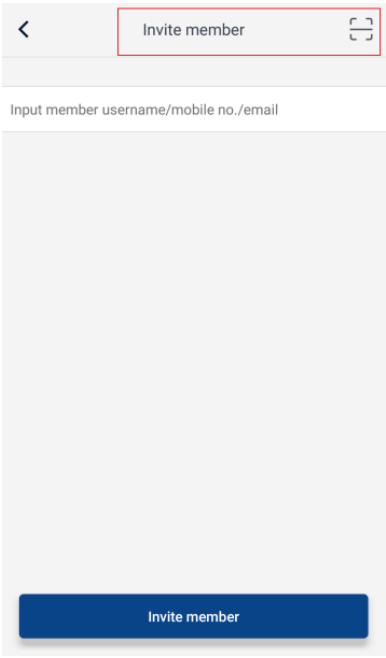


Help

Click Help and view the operation instructions of the app.

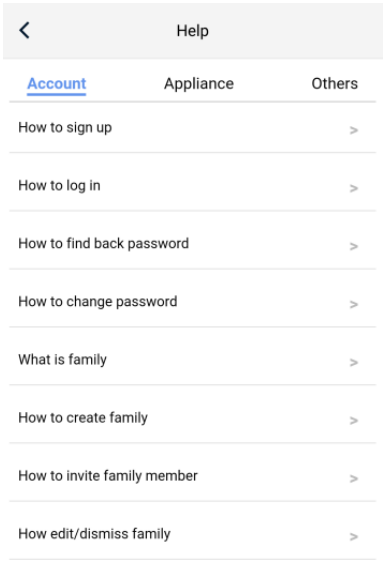

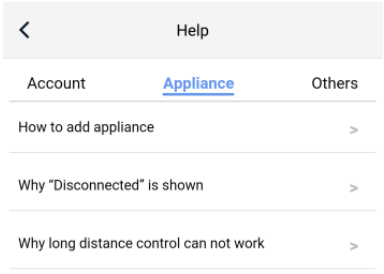

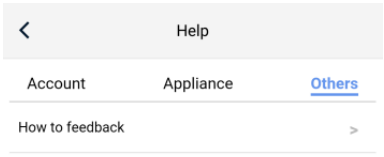

Feedback

Click "Feedback" to submit feedback.

